

A
L
L
I
S
O
N

FAULT CODES

1000 TRANSMISSIONS

2000 TRANSMISSIONS

ALLISON 1000/2000/24000 SERIES ELECTRONIC CONTROLS TROUBLESHOOTING MANUAL

DIAGNOSTIC TROUBLE COPDES (DTC)

5-5. DIAGNOSTIC TROUBLE CODES (DTCs)

DTC LIST AND DESCRIPTIONS INDEX

DTC	Description	Check Trans Light	Page
P0121	Pedal Postion Sensor Performance Problem	No	5-15
P0122	Pedal Postion Sensor Circuit Low Voltage	No	5-16
P0123	Pedal Postion Sensor Circuit High Voltage	No	5-19
P0218	Transmission Fluid Over Temperature	No	5-22
P0562	System Voltage Low	Yes	5-26
P0563	System Voltage High	Yes	5-29
P0602	TCM Not Programmed	Yes	5-33
P0606	Controller Internal Performance	Yes	5-34
P0701	Transmission Control System Performance	No	5-35
P0703	Brake Switch Circuit	No	5-37
P0705	Transmission Range Sensor Circuit (PRNDL Input)	No	5-41
P0706	Transmission Range Sensor Circuit Performance	Yes	5-45
P0708	Transmission Range Sensor Circuit High Input	Yes	5-49
P0710	Transmission Fluid Temperature Sensor Malfunction	No	5-53
P0711	Transmission Fluid Temperature Sensor Circuit Performance	Yes	5-57
P0712	Transmission Fluid Temperature Sensor Circuit Low Input (High Temperature)	Yes	5-61
P0713	Transmission Fluid Temperature Sensor Circuit Low Input (Low Temperature)	Yes	5-65
P0716	Turbine Speed Sensor Circuit Performance	Yes	5-69
P0717	Turbine Speed Sensor Circuit No Signal	Yes	5-73
P0721	Output Speed Sensor Circuit Performance	Yes	5-77
P0722	Output Speed Sensor Circuit No Signal	Yes	5-81
P0726	Engine Speed Input Circuit Performance	Yes	5-85
P0727	Engine Speed Sensor Circuit No Signal	Yes	5-89
P0731	Incorrect 1st Gear Ratio	Yes	5-93
P0732	Incorrect 2nd Gear Ratio	Yes	5-97
P0733	Incorrect 3rd Gear Ratio	Yes	5-101
P0734	Incorrect 4th Gear Ratio	Yes	5-105
P0735	Incorrect 5th Gear Ratio	Yes	5-109
P0736	Incorrect Reverse Ratio	Yes	5-113
P0741	Torque Converter Clutch System Stuck Off	Yes	5-117
P0742	Torque Converter Clutch System Stuck On	Yes	5-120
P0748	Pressure Control Solenoid A Electrical	Yes	5-123
P0763	Shift Solenoid C Electrical	Yes	5-127
P0768	Shift Solenoid D Electrical	Yes	5-131
P0773	Shift Solenoid E Electrical	Yes	5-135
P0778	Pressure Control Solenoid B Electrical	Yes	5-139
P0840	Transmission Pressure Switch Solenoid C Circuit	Yes	5-143
P0841	Transmission Pressure Switch Solenoid C Circuit Stuck Open	Yes	5-147

DIAGNOSTIC TROUBLE COPDES (DTC)

DTC LIST AND DESCRIPTIONS INDEX (cont'd)

DTC	Description	CHECK TRANS LIGHT	Page
P0842	Transmission Pressure Switch Solenoid C Circuit Stuck Closed	Yes	5-151
P0843	Transmission Pressure Switch Solenoid C Circuit High	Yes	5-155
P0845	Transmission Pressure Switch Solenoid D Circuit	Yes	5-159
P0846	Transmission Pressure Switch Solenoid D Circuit	Yes	5-163
P0847	Transmission Pressure Swtich Solenoid D Circuit	Yes	5-167
P0848	Transmission Pressure Switch Solenoid D Circuit	Yes	5-171
P1688	Unmanaged Engine Torque Delivered to TCM	Yes	5-175
P1709	Transmission Pressure Switch Solenoid E Circuit	Yes	5-177
P1710	Transmission Pressure Switch Solenoid E Circuit Stuck Open	Yes	5-181
P1711	Transmission Pressure Switch Solenoid E Circuit Stuck Closed	Yes	5-185
P1712	Transmission Pressure Switch Solenoid E Circuit High	Yes	5-189
P1713	Transmission Pressure Switch Reverse Circuit	Yes	5-193
P1714	Transmission Pressure Switch Reverse Circuit Stuck On	Yes	5-197
P1716	Transmission Pressure Switch Reverse Circuit High	no	5-201
P1718	Incorrect Neutral Gear Ration	No	5-205
P1720	Solenoid A Controlled Clutch Not Engaged	Yes	5-209
P1721	Solenoid B Controlled Clutch Not Engaged	Yes	5-213
P1723	Solenoid A Controlled Clutch Engaged	Yes	5-217
P1724	Solenoid B Controlled Clutch Engaged	Yes	5-221
P1726	Shift Solenoid D Controlled Clutch Engaged	No	5-225
P1727	Shift Controlled E Clutch Engaged	No	5-229
P1760	TCM Supply Voltage	No	5-233
P1779	Engine Torque Delivered To ECM	Yes	5-236
P1835	Kickdown Circuit	Yes	5-238
P1860	Torque Converter Clutch PWM Solenoid Circuit --Electrical	Yes	5-241
P1875	4WD Low Switch Circuit	Yes	5-245
P1891	Throttle Postion Sensor Pulse Width Modulation (PWM) Signal Low Input	No	5-249
P1892	Throttle Postion Sensor Pulse Width Modulation (PWM) Signal High Input	No	5-252
U1000	Serial Data Communication Link Malfunction (Class2)	No*	5-255
U1016	Class 2 Powertrain Controller State of Health Failure	No*	5-258
U1041	Class 2 ABS Controller State of Health Failure	No*	5-261
U1064	Class 2 TBC Controller State of Health Failure	No*	5-264
U1096	Class 2 IPC Controller State of Health Failure	No*	5-267
U1300	Serial Data Communication Link Low (Class2)	No	5-270
U1301	Serial Data Communication Link High (Class2)	No	5-273
U2104	Can Bus Rest Counter Overrun	Yes	5-276
U2105	Can Bus Error ECM	Yes	5-279